

## Tip

## How-To

Cleaning Filter Cap

Remove filter cap and using a cotton swab, gently remove any dust or debris.



Cleaning Hair from Motor

To clean hair caught in the inside of dryer, turn the dryer on max speed and place your hand over the filter cap.

This will burn away any hair caught inside the dryer.



Cord Maintenance

Do not wrap the cord tightly around the tool itself, which causes the cord to wear prematurely. The cord should be coiled and can be held together with a cord organizer or by wrapping the cord around itself.



# Hair Dryer Troubleshooting

## Issue

## Recommended

Damaged filter screen

If damaged when student first opens box, order replacement.

If damage is due to a drop or misuse, student purchases replacement.

Low power,  
motor strain

Remove filter. Using a cotton swab, wipe filter clean.

If issue continues, order replacement.

If defect is due to a drop or misuse, student purchases replacement.



Makes loud noise

If loud noise occurs when student first opens box, order replacement.

If defect is due to a drop or misuse, student purchases replacement.

Cracked or broken  
plastic housing

If damaged when student first opens box, order replacement.

If damage is due to a drop or misuse, student purchases replacement.



Damaged cord

If cord is damaged when student first opens box, order replacement.

If damage is due to wrapping cord or misuse, student purchases replacement.



Does not turn on or  
does not blow hot air

If defective when student first opens box, order replacement.

If dryer doesn't turn on or blow hot air after use, order replacement.

If defect is due to a drop or misuse, student purchases replacement.

Replacements

Replacement concentrators, pik attachments and dryer filters are available on the website. Do not return dryer; only the part requested will be replaced.



*Please carefully review the manufacturer's care and use instructions in the manual included in the original packaging.*